

# Servicing Instructions STEREO DYNAMIC 1070

## I. General Data

Power supply: For A.C. only, 117V, 60c/s  
Fuse: Glass-tube fuse, 1.6 A  
Dial illumination: 3 lamps 7V, 0.3A, one of which is a pilot lamp for stereo operation.  
Tubes: ECC 85 (6AQ8), ECH 81 (6AJ8), EF 89 (6DA6), 2x EABC 80 (6AK8), 2x EL 84 (6BQ5), 2x EM 85, EZ 81 (6CA4).

## II. Mechanical Readjustment of Dial Indicator

Turn AM and FM tuning control to the right as far as possible and set both indicators on the corresponding end marks.

## III. Preparations for tuning AM circuits

- Switch set to push-pull (mono). (Stereo button undepressed).  
Dynamic button undepresses.  
Turn volume, bass and treble controls to full and set ferrite antenna at 0 or 360 degrees.  
Depress "Orchestra" tone selector button and set Distant/Local switch at Distant.
- Signal generator (30% AM modulated) should be connected via 5000 pF to G1 (Hex) of tube ECH 81 for AM - IF tuning (472 kc/s) and via a dummy antenna (circuit 400 pF/200 Ohms) to the antenna and earth sockets for tuning IF band-stop circuit, AM oscillators and AM preliminary circuits.
- Connect output meter to connector for supplementary loudspeaker (1.5 V range).  
During tuning, the output voltage should be about 400 mV.  
Damping element: Series circuit 5000 pF/30 kOhms.
- Ferrite antenna switched out.

## IV. Preparations for tuning FM - IF circuits

Apply signal generator voltage (unmodulated) through tube ECC 85 via coupling cap.  
Control and button positions immaterial.  
DC tube voltmeter or high-impedance measuring instrument connected for C- or D-type measurement.  
Tune at approx. 2 Volt reference voltage (AVC). Damping element: Series circuit 5000 pF/5 kOhms.

## V. Tuning of FM - HF Section

- Connect signal generator (unmodulated) to dipole connector (240 Ohms symmetrical).  
Reference voltage (AVC) approx. 6 V.  
Connect measuring instrument for C- or E-type measurement.  
a) Set signal generator and scale indicator at 105 Mc/s and trim point 20 to maximum response.  
b) Set signal generator and scale indicator at 89 Mc/s and turn point 24 to maximum response.  
Repeat tuning procedures a and b until no further improvement is obtained.  
Set signal generator and scale indicator at 100 Mc/s, and turn points 21 and 23 to maximum response.
- Neutralisation tuning is carried out at 100 Mc/s by alternate trimming of points 22 and 21, tuning 22 to minimum response with the anode voltage cut out (disconnected at W 191), and 21 to maximum response with reconnected anode voltage.  
Repeat procedure until no further improvement is obtained.

## VI. Note





To obtain optimum symmetrical form of the transmission curve, it is recommended that the entire tuning should be carried out in accordance with Table VII.  
After tuning seal the cores with wax and the ferrite coil with lacquer.




Tuning Table

	Signal generator connection	Type of modulation	Press wave-band button	Tuning		Special adjustments	Tuning element	Position	Tune to	Type of measurement
				of signal generator	of receiver					
AM	via 5000 pF to G1 ECH 81 (Hex)	AM 30%	MW	472 kc/s	1 Mc/s	Damp filters alternately	Core 1 BV 788 Core 2 BV 788 Core 3 BV 787 Core 4 BV 787	bottom top bottom top	maximum	A
	472 kc/s 520 kc/s 1.6 Mc/s 560 kc/s 1.6 Mc/s 150 kc/s 200 kc/s 200 kc/s 6 Mc/s 7 Mc/s			510 kc/s 520 kc/s 1.6 Mc/s 560 kc/s 1.6 Mc/s 150 kc/s 200 kc/s 200 kc/s 6 Mc/s 7 Mc/s	SW lens to centre	Core 5 BV 700 Core 6 BV 657/II Trimmer 7 C 211 Core 8 BV 825 Trimmer 9 C 205 Core 10 BV 546/I Coil 11 BV 729 Core 11a BV 810/II Core 12 BV 702/V Core 13 BV 725/II	side bottom bottom bottom bottom top top bottom bottom	minimum maximum		
	LW									B
	SW									
FM	to coupling cap over tube ECC 85	unmodulated	FM	10.7 Mc/s	94 Mc/s		Core 14 BV 788	bottom	3 turns out	C
							Core 15 FM section	top	2 turns out	
							Core 16 FM section	bottom	maximum	
							Core 15 FM section	top	damp	
							Anode circuit ECH 81	A (Hex)	1 - 2 turns out	
	Core 17 BV 788			top	maximum					
	Core 18 BV 787			top	cancel damping					
	Anode circuit ECH 81			A (Hex)	damp					
	Grid circuit EF 89			G1	maximum					
	Core 19 BV 787			bottom	cancel damping					
Core 17 BV 788	top	zero output	D							
Grid circuit EF 89	G1									
to dipole connector				105 Mc/s 89 Mc/s	105 Mc/s 89 Mc/s		Core 14 BV 788	bottom		C
							Trimmer 20 FM section	top		
							Coil 24 FM section	top		
							Trimmer 21 FM section	top	maximum	
							Coil 23 FM section	top		
							Trimmer 22 FM section	top	minimum	E

Type of Measurement:



- Connect AC voltmeter to connector for supplementary loudspeaker.
- Tune by displacing the ferrite coil with ferrite antenna switched on, otherwise as under A.
- Tube voltmeter or high-impedance measuring instrument via blocking resistance at junction point C 402/W 405 and chassis.
- Voltage divider (2x 100 kOhms) to junction point C 402/W 405 and chassis.  
Tube voltmeter or high-impedance measuring instrument to centre of voltage divider and to junction point C 407/W 406.
- as under C, but disconnect at W 191 and substantially increase signal generator voltage.

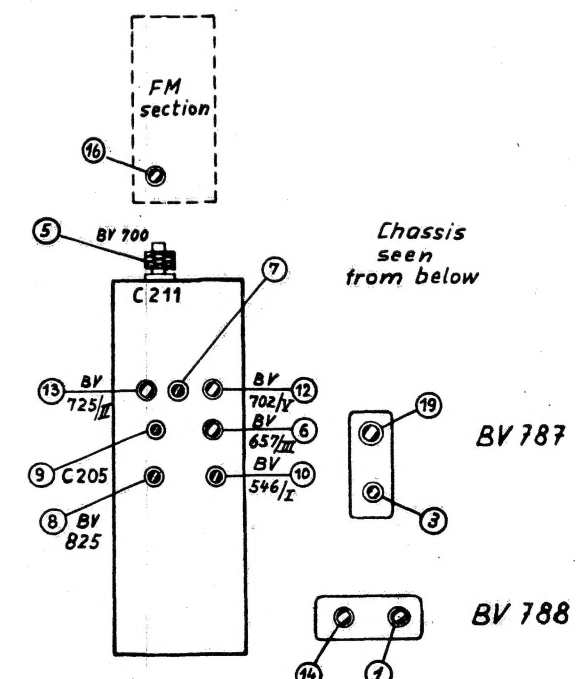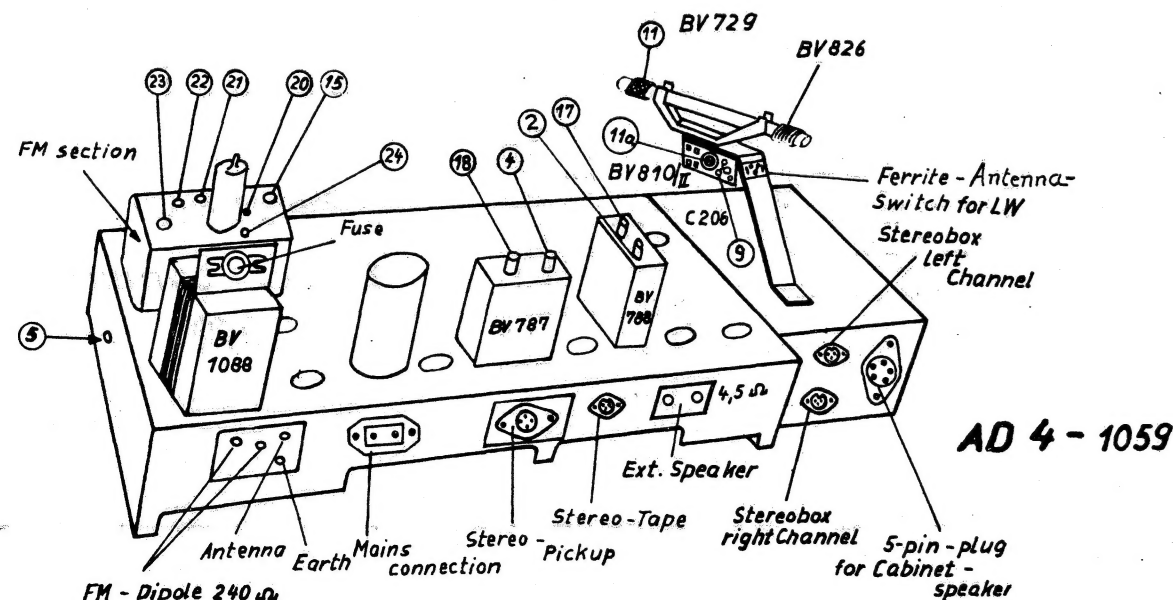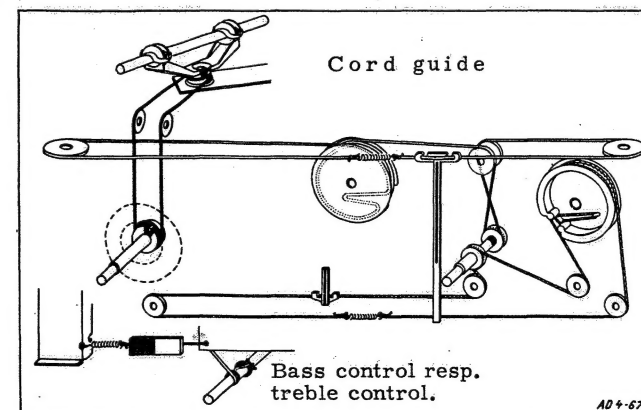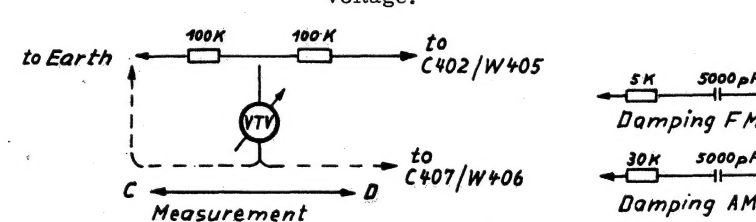

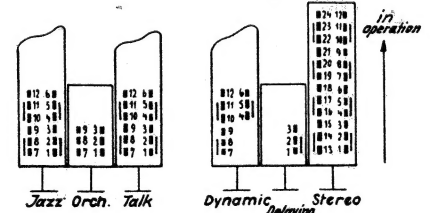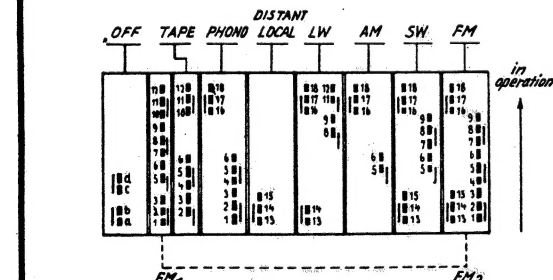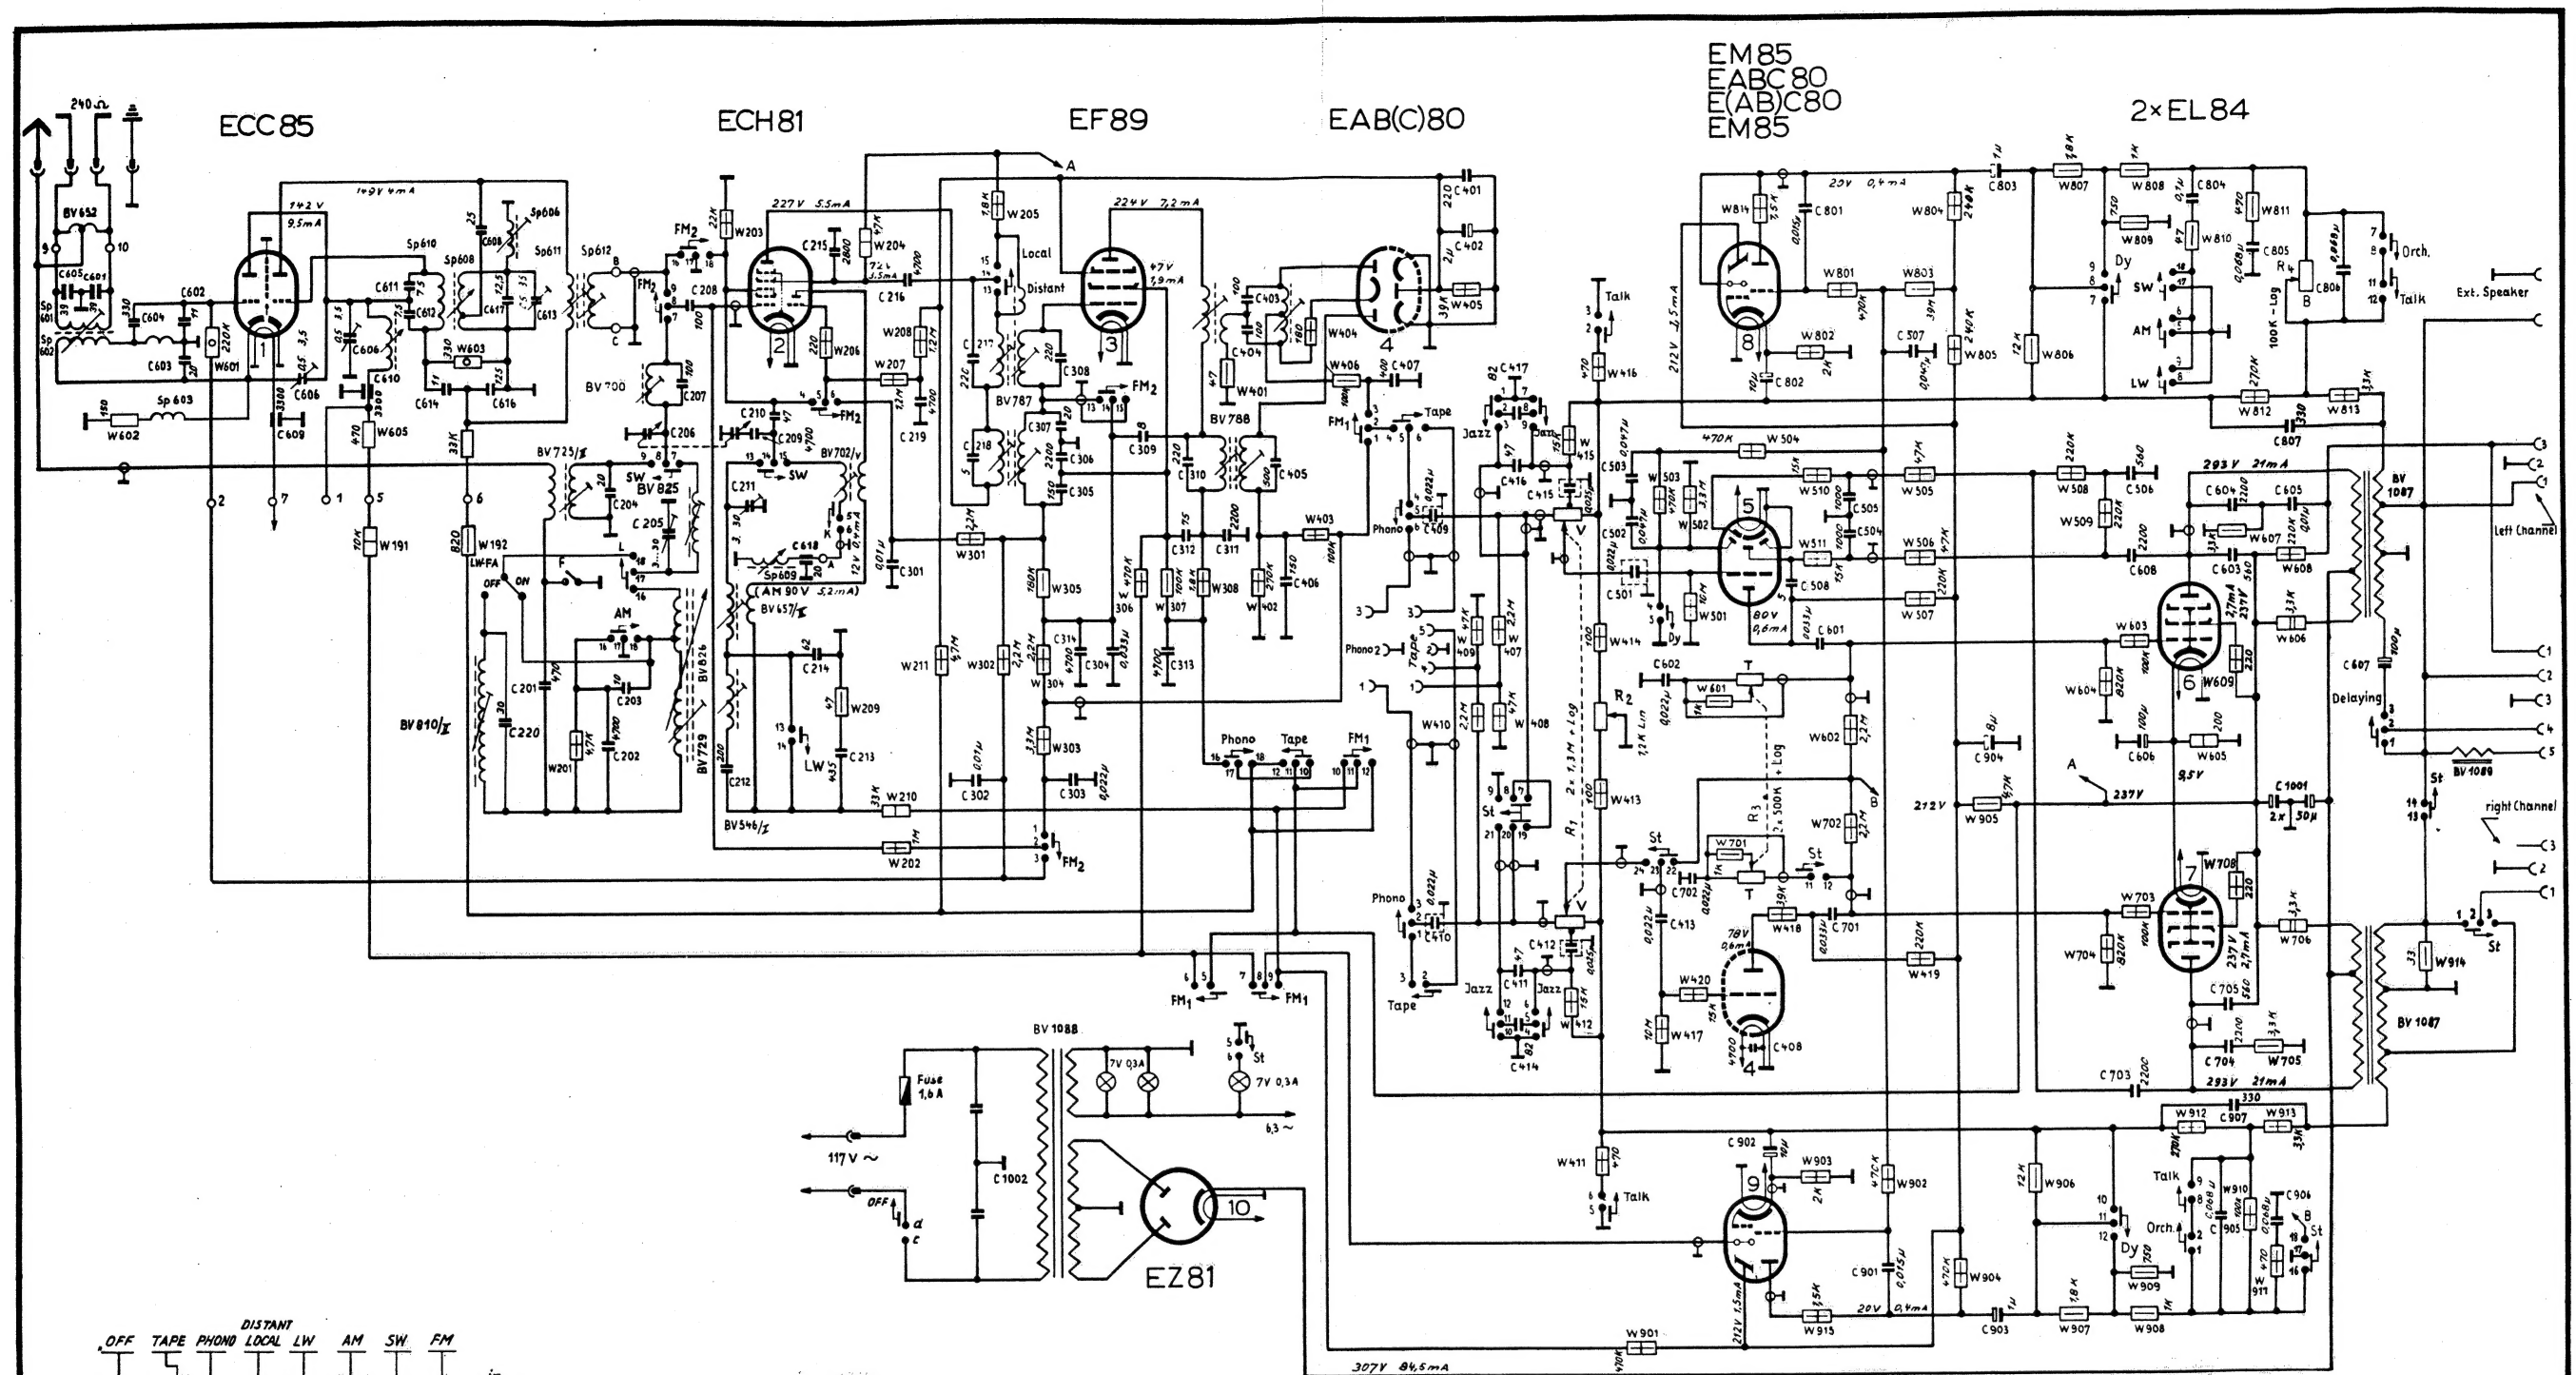

Tensions measured with VTV  $\geq 10M\Omega$ .  
 Currents measured with moving coil instr.  
 1000µV on FM (on AM)

Position of press-button "OFF"

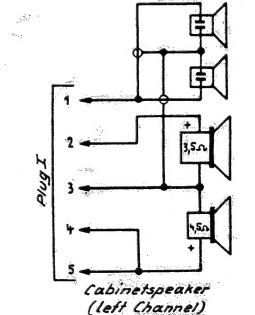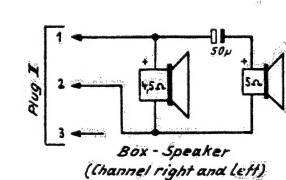

Wiringdiagram  
 Stereo - Dynamic  
 1070

KÖRTING RADIO WERKE  
 G.m.b.H.

00505/3W

AD 1 - 1017